



INSTRUCTIONS FOR USING THE MASTERLOCK KEY SAFE

Black latch: Pull down to open safe door

Scroll numbers: Scroll up and/or down to your code



Plastic protective cover (slides up and down)

Engraved line to which numbers must align along

KEY SAFE OPENING PROCESS:

- 1. PULL DOWN THE PLASTIC PROTECTIVE COVER**
- 2. SCROLL THE NUMBERS ON THE KEYPAD TO LINE UP YOUR CHOSEN 4 NUMBER CODE ACROSS THE ENGRAVED LINE AT THE CENTRE OF THE KEYPAD**
- 3. PULL BLACK LATCH TO THE LEFT OF KEYPAD IN A DOWNWARD MOTION TO OPEN THE KEY SAFE**
- 4. THE KEY SAFE DOOR SHOULD NOW FALL AND/OR PULL OPEN**
- 5. TAKE KEYS OUT AND USE APPROPRIATELY**

RETURNING KEYS & LOCKING THE KEY SAFE:

- 1. RETURN YOUR KEYS INSIDE THE KEY SAFE**
- 2. CLOSE KEY SAFE DOOR**
- 3. MIX UP NUMBERS TO ACTIVATE LOCKING MECHANISM**
- 4. TEST THE KEY SAFE IS LOCKED, BY ATTEMPTING TO PULL BLACK LATCH IN A DOWNWARD MOTION**
- 5. PULL UP THE PROTECTIVE SLIDING COVER**

Limited Warranty

Keysafe Man warrants that this product will be free of defects in material and workmanship for one year from the date of purchase. This warranty is limited to repair or replacement at Keysafe Man's option. This warranty does not cover forgotten or incorrectly set combinations. Damage caused by modification, abuse or misuse, wear and tear, improper installation, application, storage, or fault or negligence of a party other than Keysafe Mans are not covered. Keysafe Man will not be responsible for labour costs of removal or reinstallation of products. The repaired or replaced product is then warranted under the terms of this limited warranty for the balance of the term of the warranty or for 90 days, whichever is longer. To obtain repair or replacement information under the terms of this warranty, please contact Keysafe Man directly.