


USER INSTRUCTIONS: SUPRA GE C500 KEY SAFE

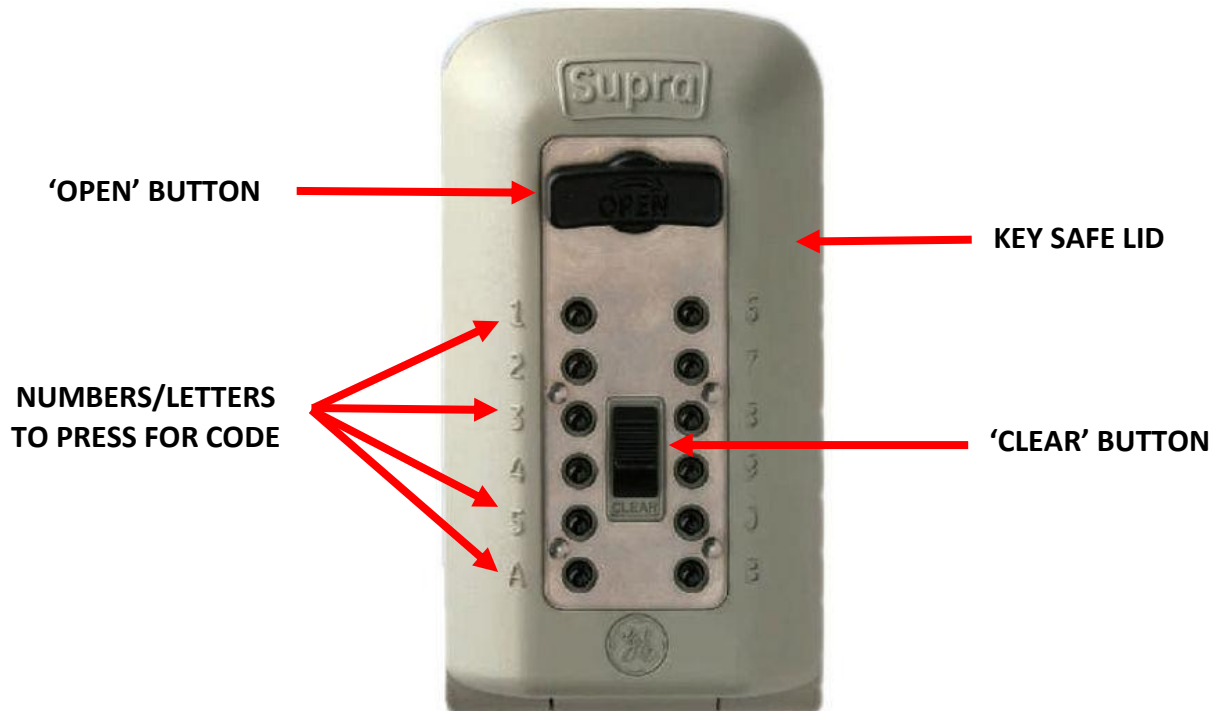

SupraUK®

OPENING PROCESS:

1. PULL DOWN THE WEATHER PROOF COVER TO EXPOSE THE KEYSAFE
2. PRESS AND SLIDE DOWN THE 'CLEAR' BUTTON ON THE FRONT OF THE KEYSAFE
3. ENTER YOUR CODE BY PRESSING THE CORRECT DIGITS
4. TURN THE 'OPEN' HANDLE CLOCKWISE 180° TO OPEN THE KEYSAFE LID
5. TAKE THE KEYS OUT AND USE APPROPRIATELY

RETURNING KEYS & CLOSING THE KEY SAFE:

1. RETURN KEYS INSIDE THE KEY SAFE
2. CLOSE THE KEY SAFE LID
3. TURN THE 'OPEN' HANDLE ANTI CLOCKWISE 180°
4. YOUR KEY SAFE SHOULD NOW BE CLOSED & LOCKED
5. REPLACE THE WEATHER PROOF COVER

Limited Warranty

Keysafe Man warrants that this product will be free of defects in material and workmanship for one year from the date of purchase. This warranty is limited to repair or replacement at Keysafe Man's option. This warranty does not cover forgotten or incorrectly set combinations. Damage caused by modification, abuse or misuse, wear and tear, improper installation, application, storage, or fault or negligence of a party other than Keysafe Mans are not covered. Keysafe Man will not be responsible for labour costs of removal or reinstallation of products. The repaired or replaced product is then warranted under the terms of this limited warranty for the balance of the term of the warranty or for 90 days, whichever is longer. To obtain repair or replacement information under the terms of this warranty, please contact Keysafe Man directly.