




Keysafe Man

INSTRUCTIONS FOR USING THE SUPRA S7 KEY SAFE

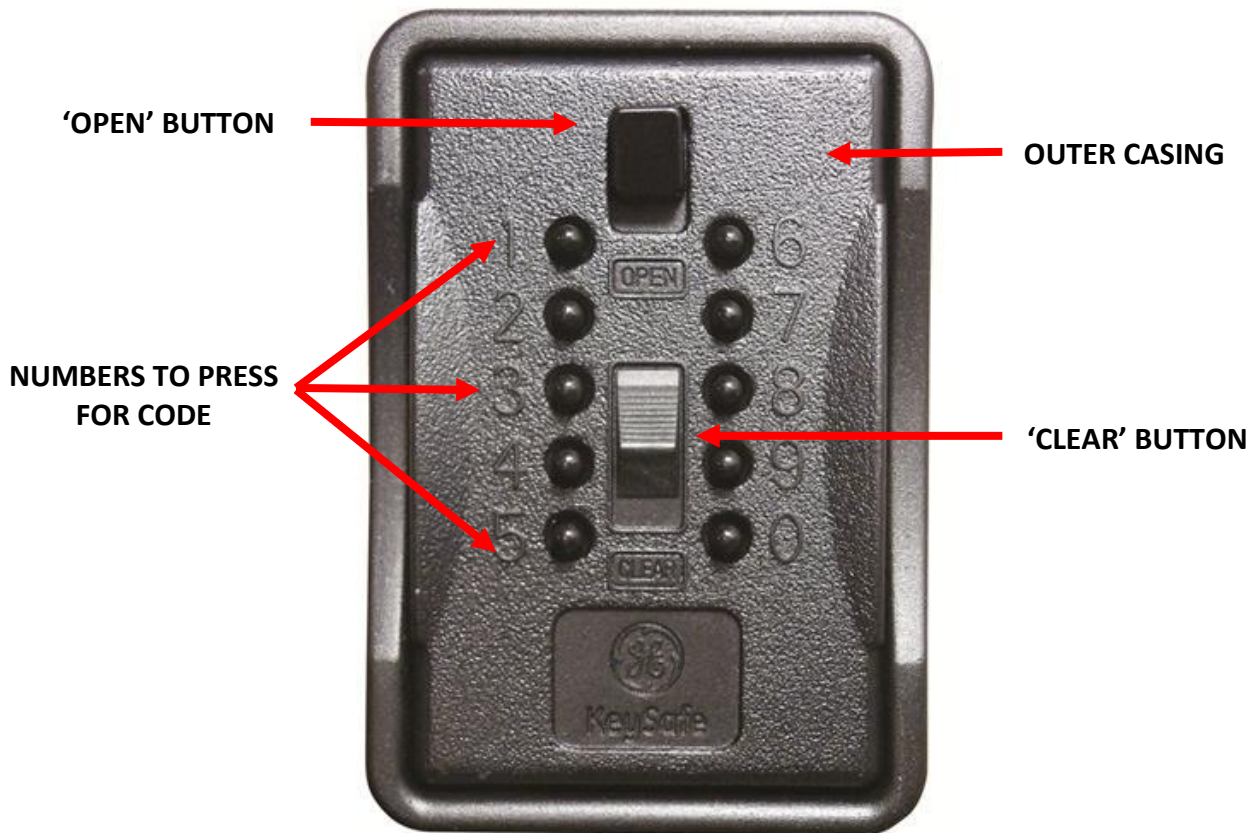

SupraUK®

OPENING PROCESS:

1. PULL DOWN ON THE 'CLEAR' BUTTON & RELEASE
2. ENTER YOUR CODE (Take care to ensure you are entering code correctly)
3. PLACE FINGER ONTO THE 'OPEN' BUTTON AND PULL IN A DOWNWARD MOTION
4. THE OUTER CASING SHOULD OPEN OUTWARDS
5. TAKE THE KEYS AND USE APPROPRIATELY

RETURNING KEYS & CLOSING THE KEY SAFE:

1. RETURN KEYS INSIDE THE KEY SAFE
2. FOLLOW THE ABOVE PROCESS UP TO POINT '3'
3. KEEP YOUR FINGER ON THE 'OPEN' BUTTON TO KEEP THE LOCKING PIN OPEN
4. PLACE THE OUTER CASING BACK IN ITS 'NORMAL' POSITION
5. NOW RELEASE THE 'OPEN' BUTTON
6. YOUR KEY SAFE SHOULD NOW BE CLOSED & LOCKED
7. REPLACE PROTECTIVE COVER

Limited Warranty

Keysafe Man warrants that this product will be free of defects in material and workmanship for one year from the date of purchase. This warranty is limited to repair or replacement at Keysafe Man's option. This warranty does not cover forgotten or incorrectly set combinations. Damage caused by modification, abuse or misuse, wear and tear, improper installation, application, storage, or fault or negligence of a party other than Keysafe Mans are not covered. Keysafe Man will not be responsible for labour costs of removal or reinstallation of products. The repaired or replaced product is then warranted under the terms of this limited warranty for the balance of the term of the warranty or for 90 days, whichever is longer. To obtain repair or replacement information under the terms of this warranty, please contact Keysafe Man directly.